

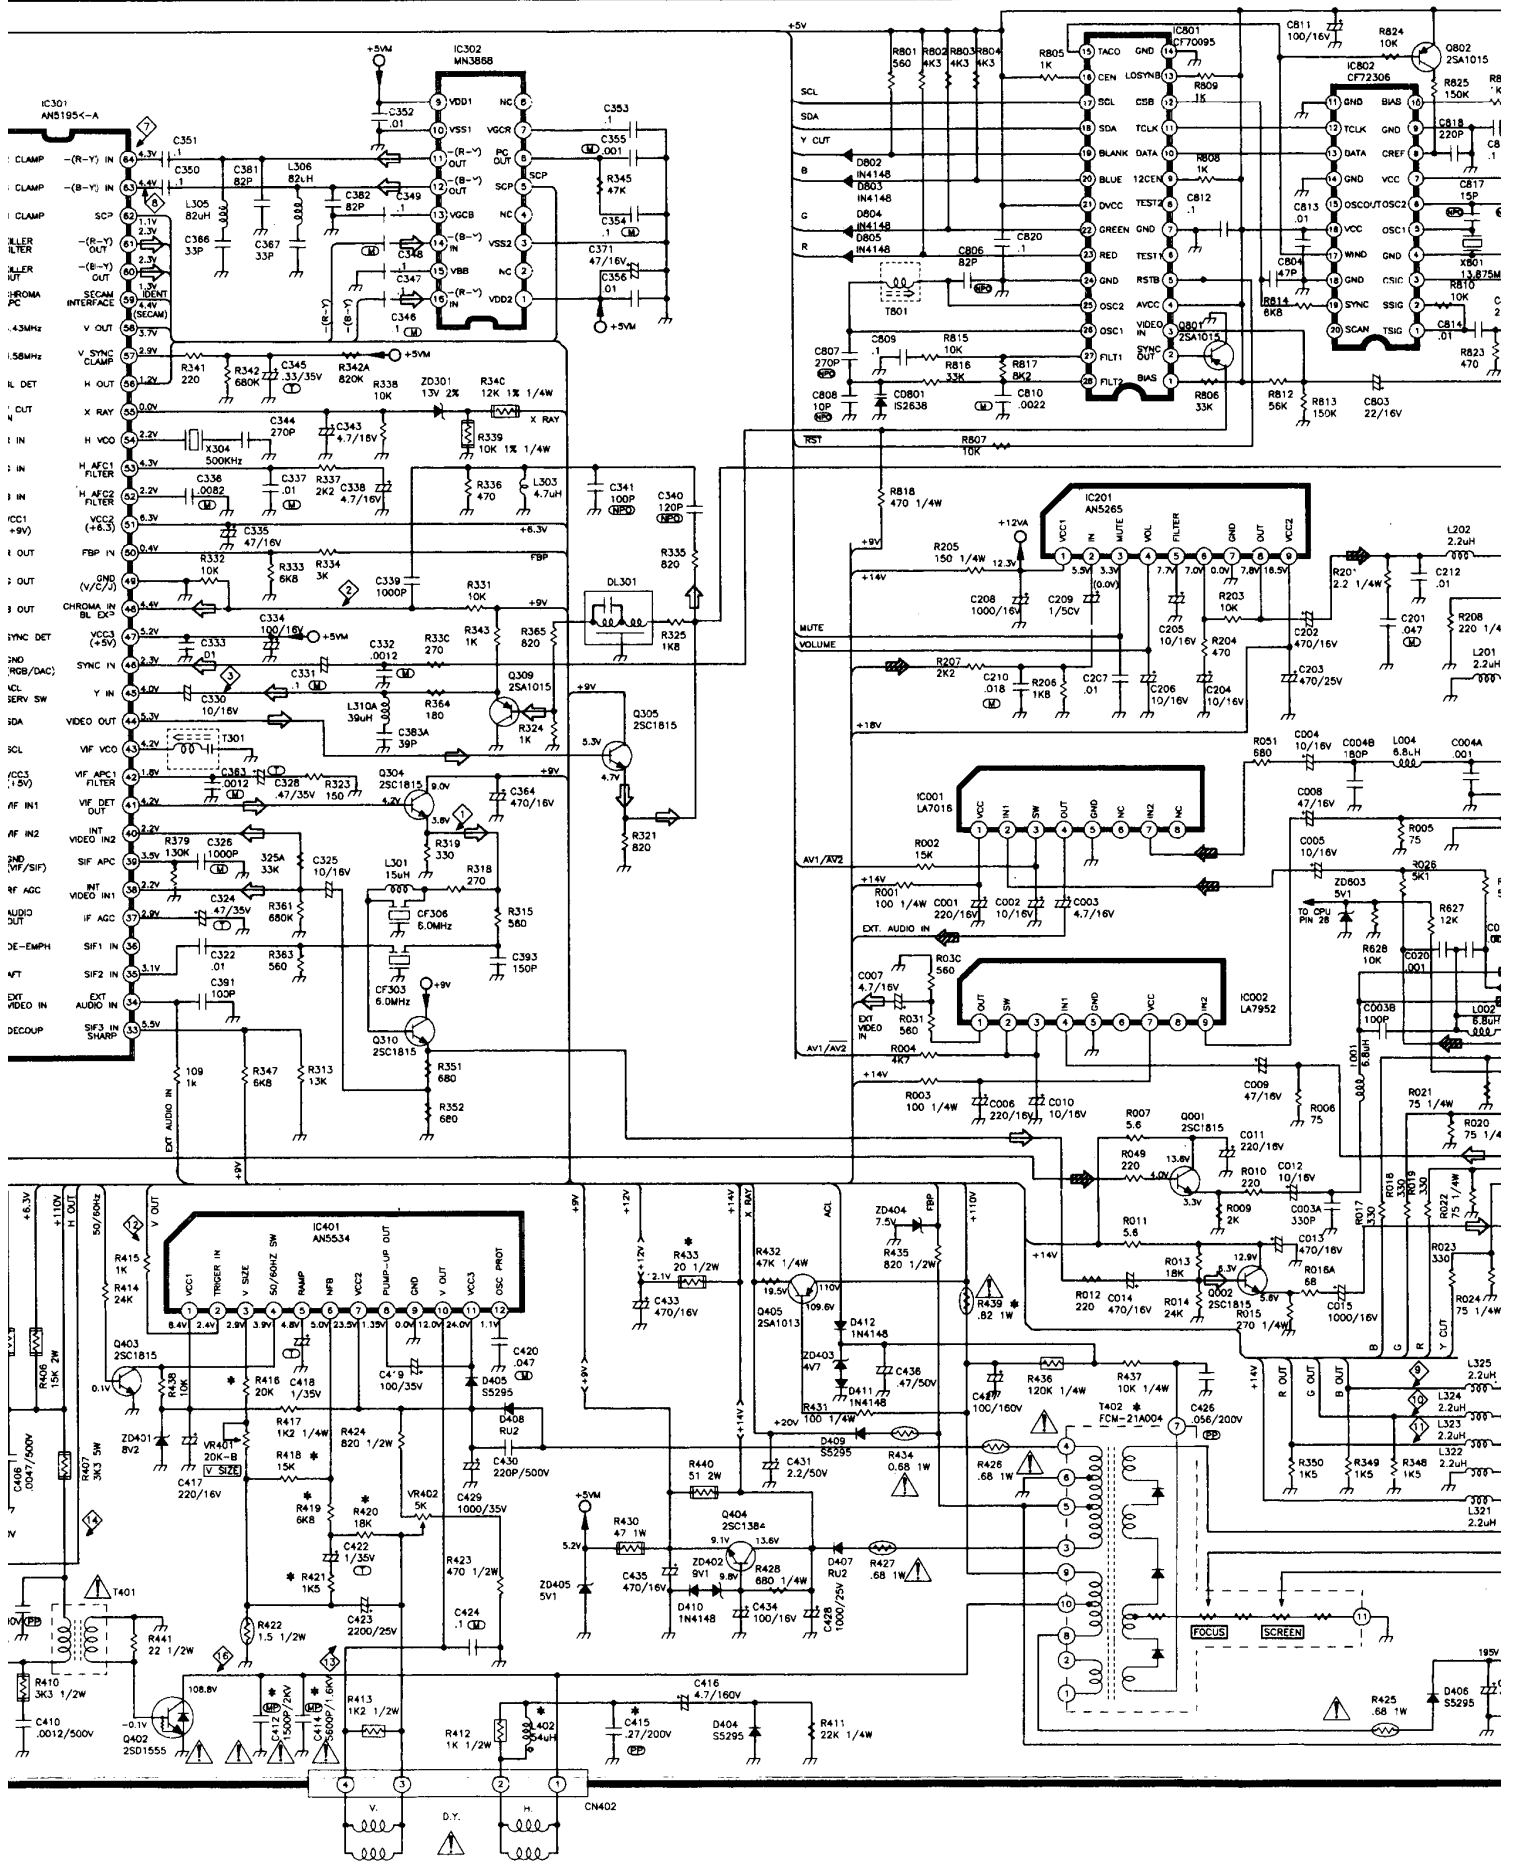



" " AUDIO SIGNAL FLOW
 " " VIDEO & INCLUDE VIDEO(SUCH AS: VIF) SIGNAL FLOW

WAVEFORM

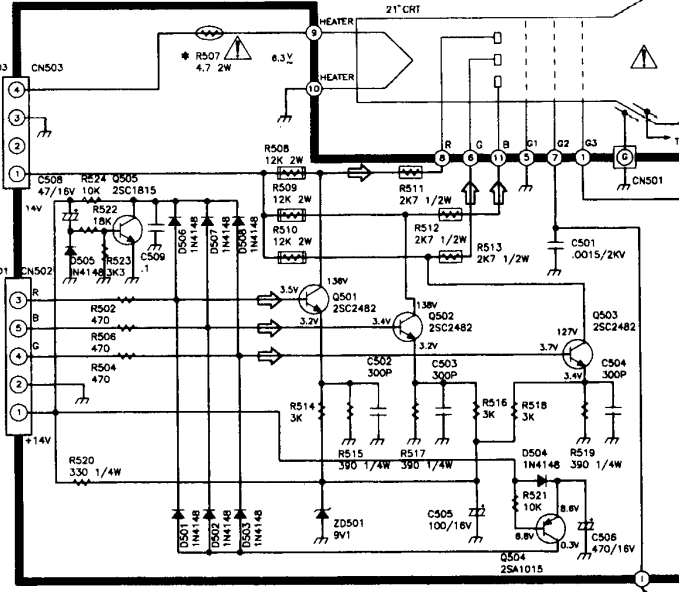


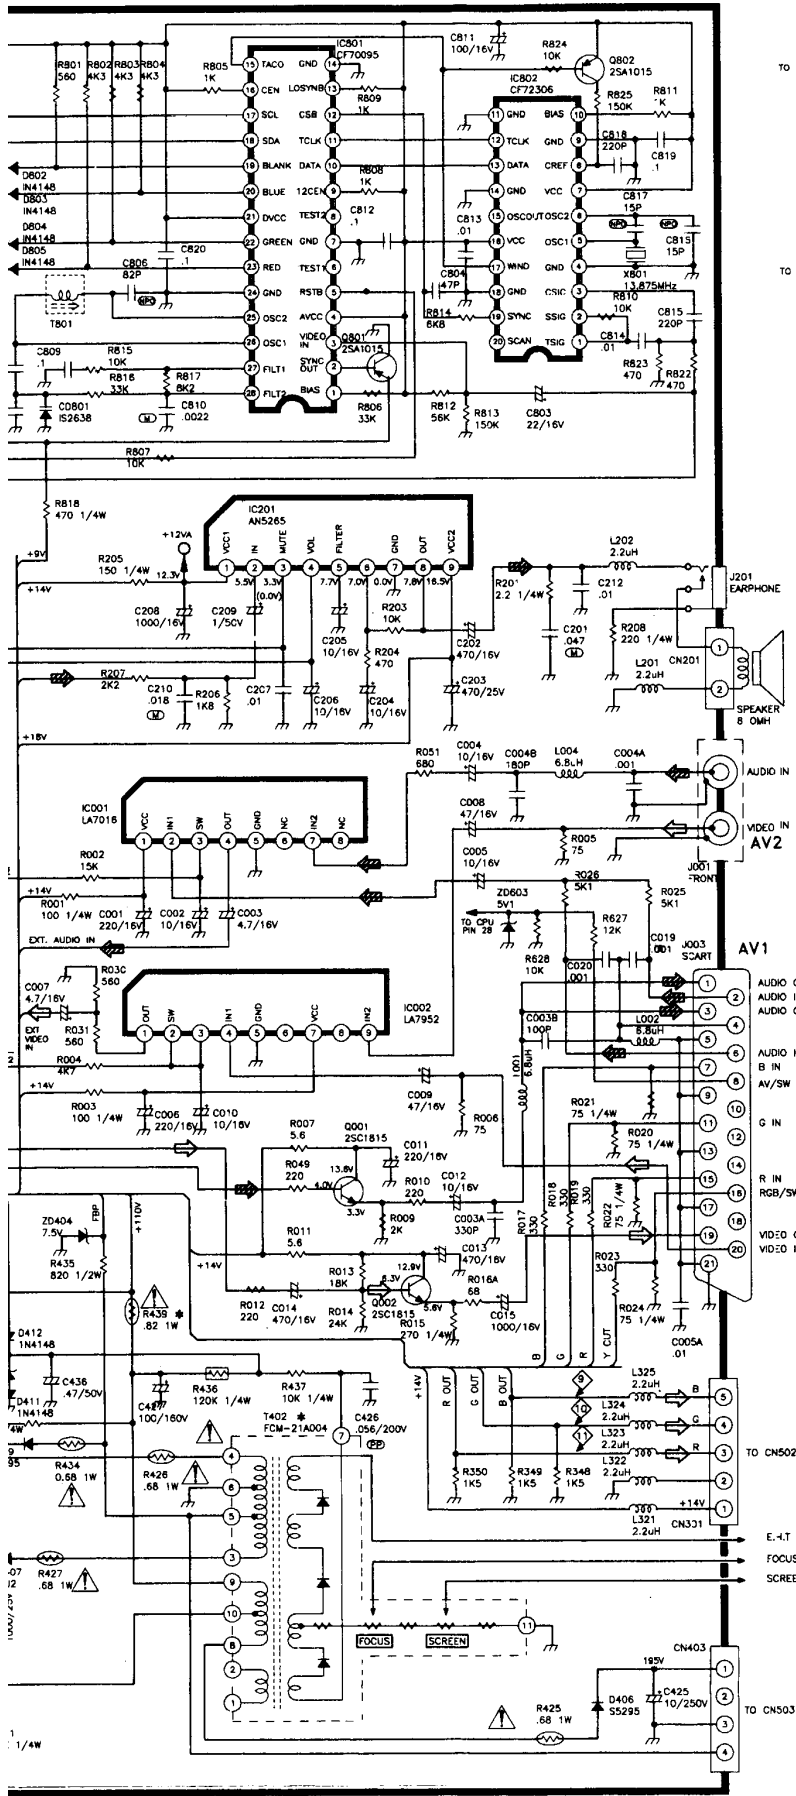


RTV servis Horvat
 Tel: ++385-31-856-637
 Tel/fax: ++385-31-856-139
 Mob: 098-788-319
www.rtv-horvat-dj.hr

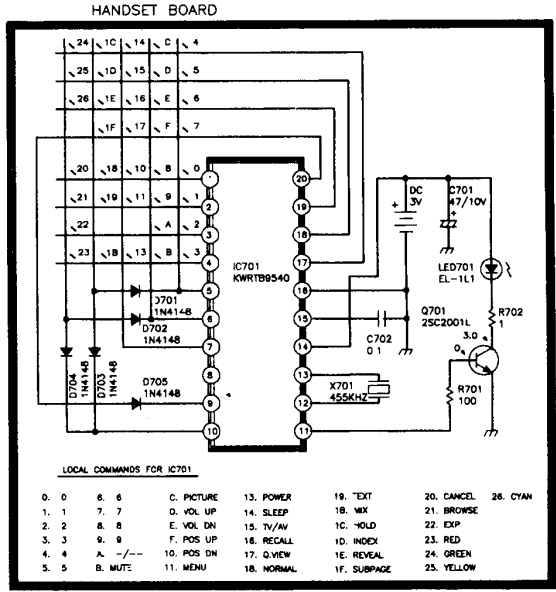






- LOCAL COMMANDS FOR IC701
- | | | | | | | |
|------|---------|-------------|------------|-------------|------------|----------|
| 0. 0 | 8. 6 | C. PICTURE | 13. POWER | 19. TEXT | 20. CANCEL | 26. CYAN |
| 1. 1 | 7. 7 | D. VOL. UP | 14. SLEEP | 18. MIX | 21. BROWSE | |
| 2. 2 | 8. 8 | E. VOL. DN | 15. TV/AV | 1C. HOLD | 22. EXP | |
| 3. 3 | 9. 9 | F. POS. UP | 16. RECALL | 1D. INDEX | 23. RED | |
| 4. 4 | A. -/-- | 10. POS. DN | 17. Q.VIEW | 1E. REVEAL | 24. GREEN | |
| 5. 5 | B. MUTE | 11. MENU | 18. NORMAL | 1F. SUBPAGE | 25. YELLOW | |

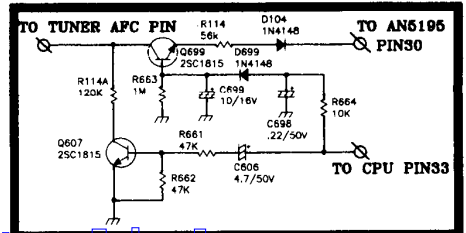

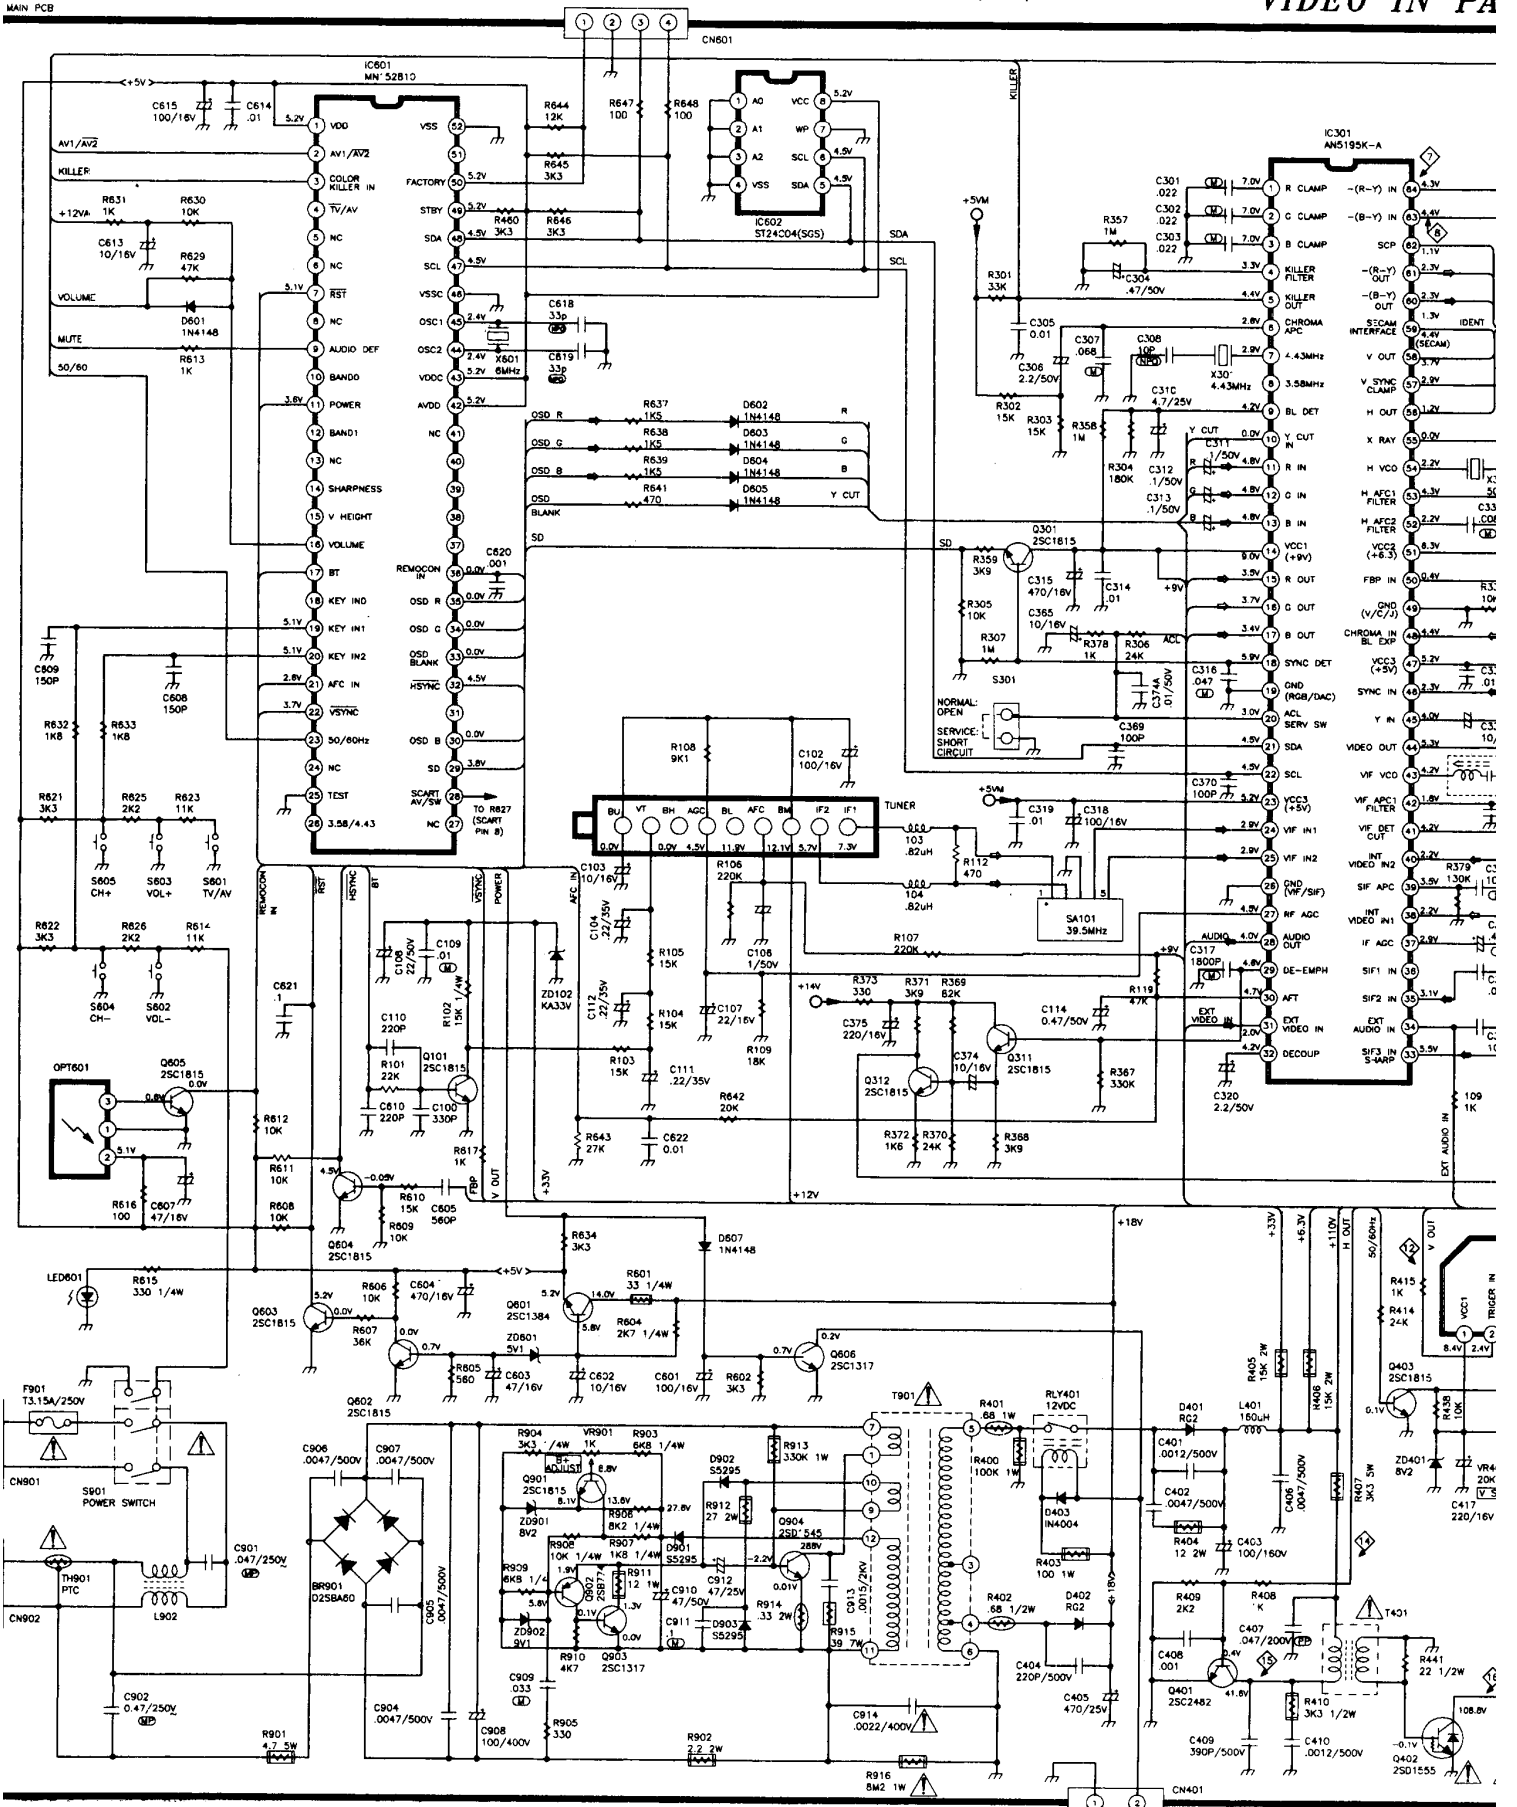

"➔" AUDIO SIGNAL FLOW
 "➔" VIDEO & INCLUDE VIDEO(SUCH AS: VIF) SIGNAL FLOW

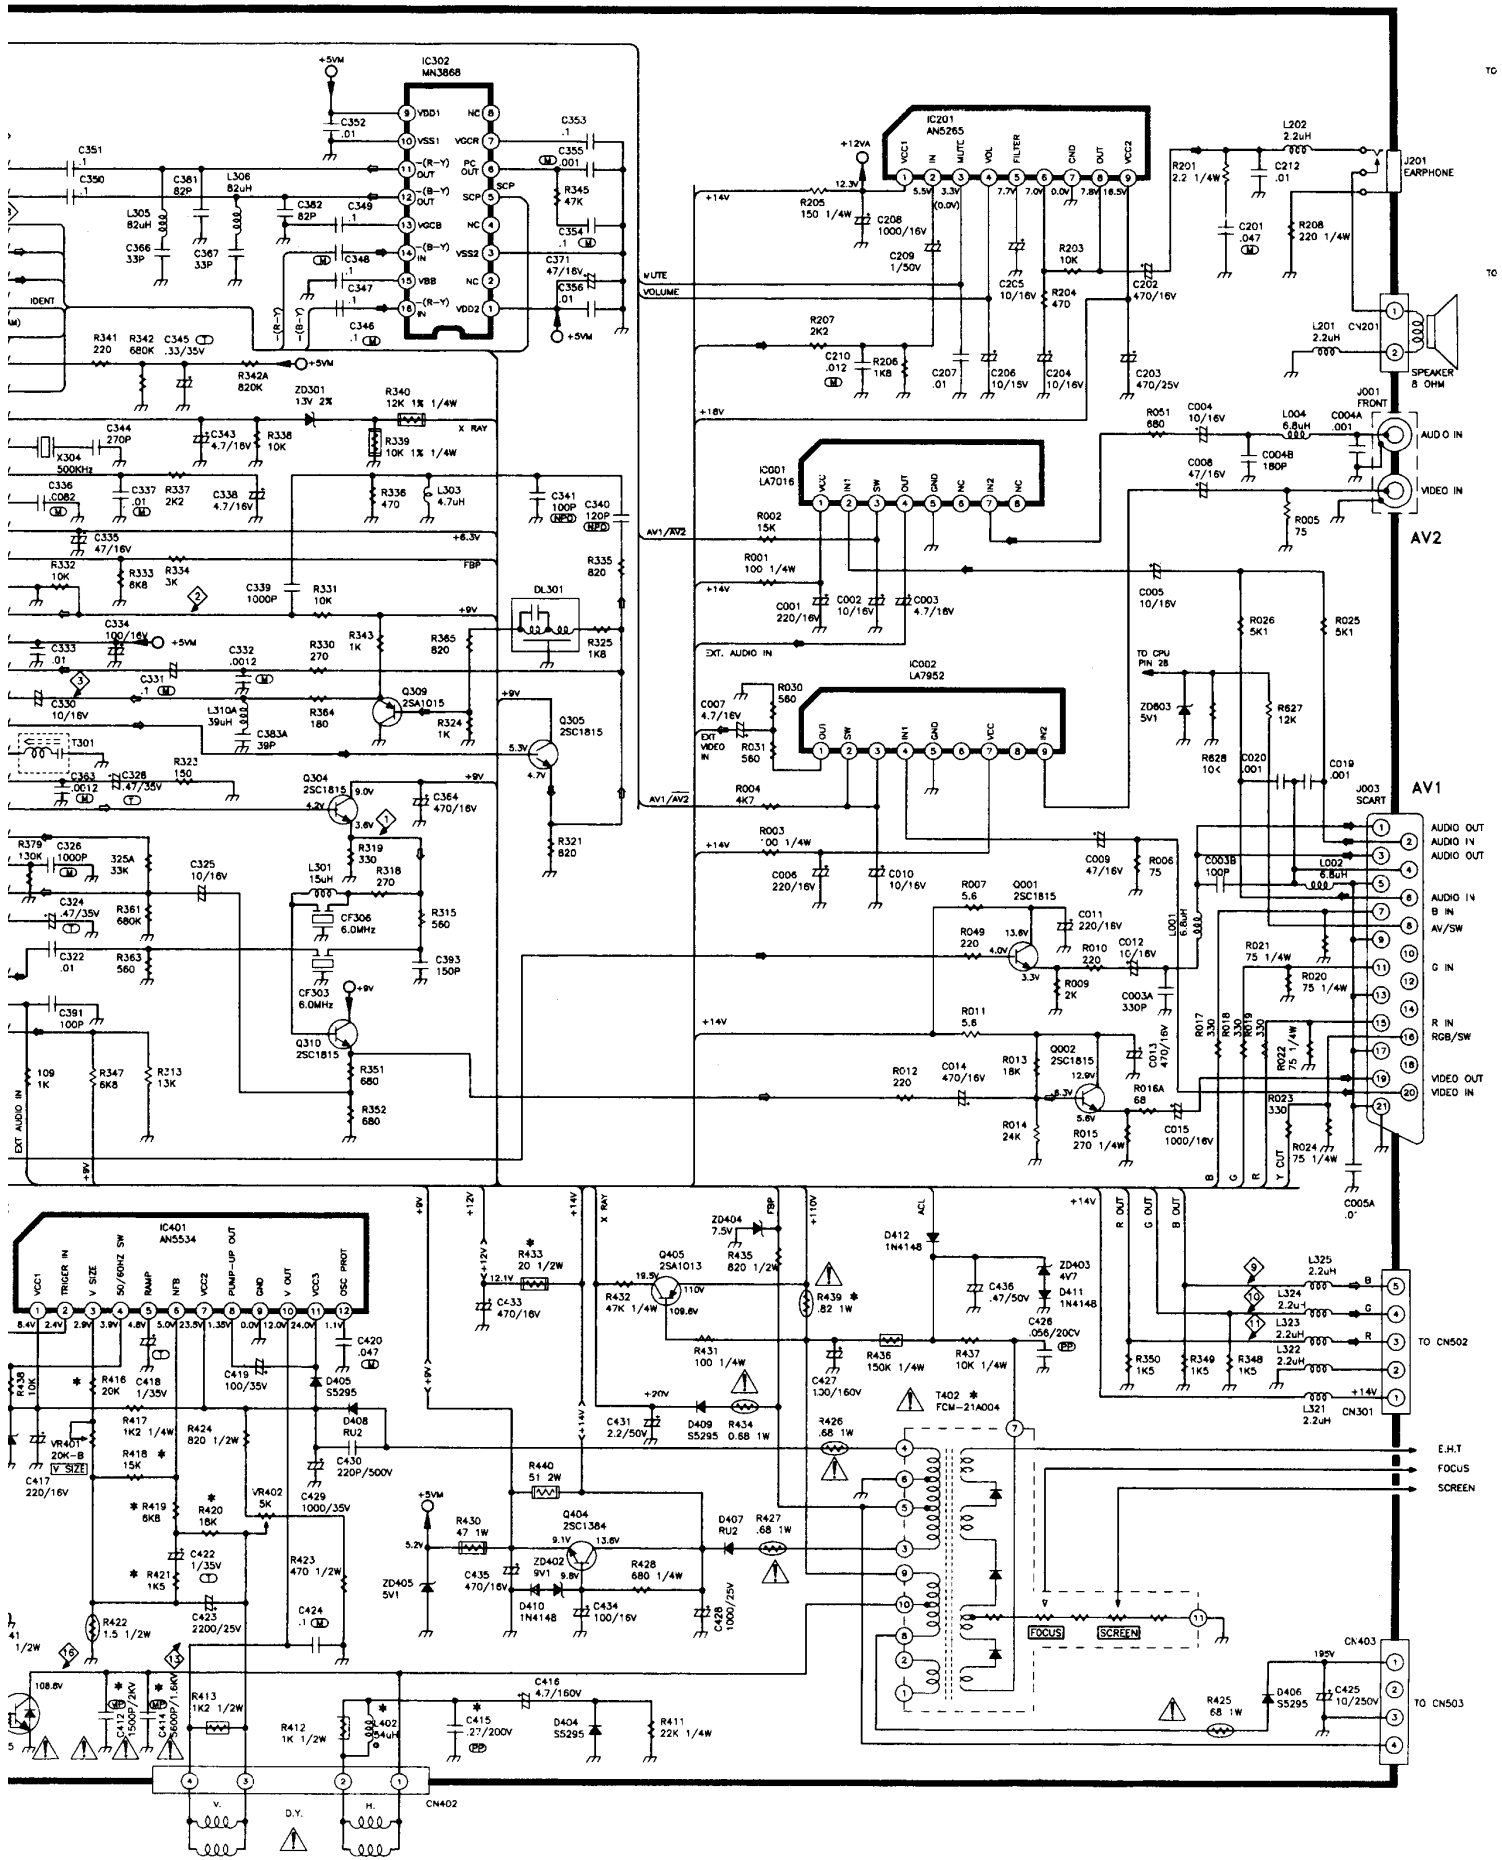

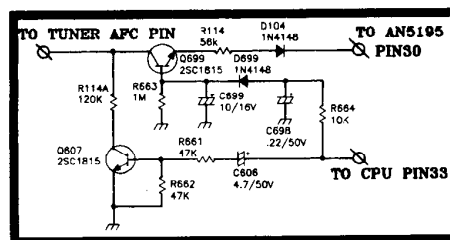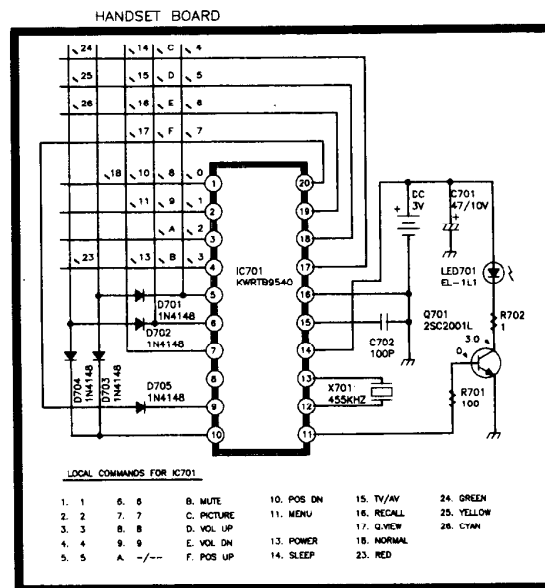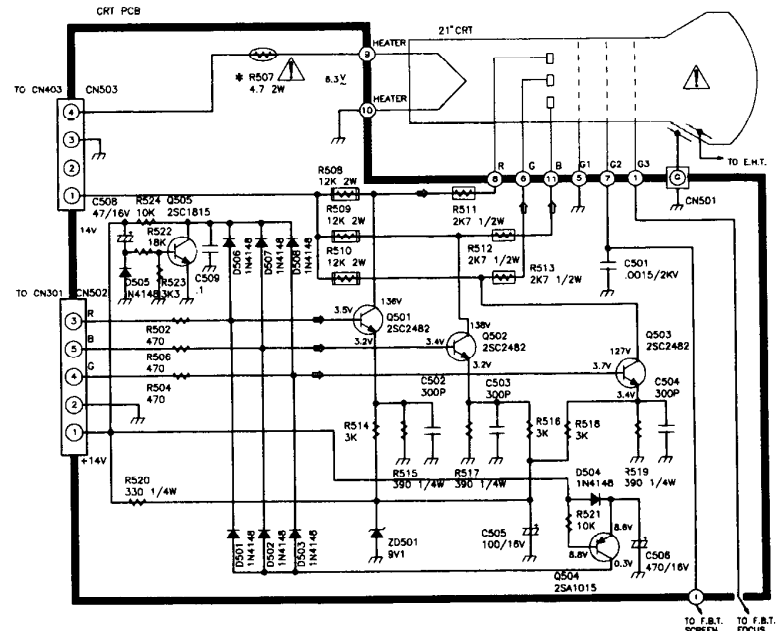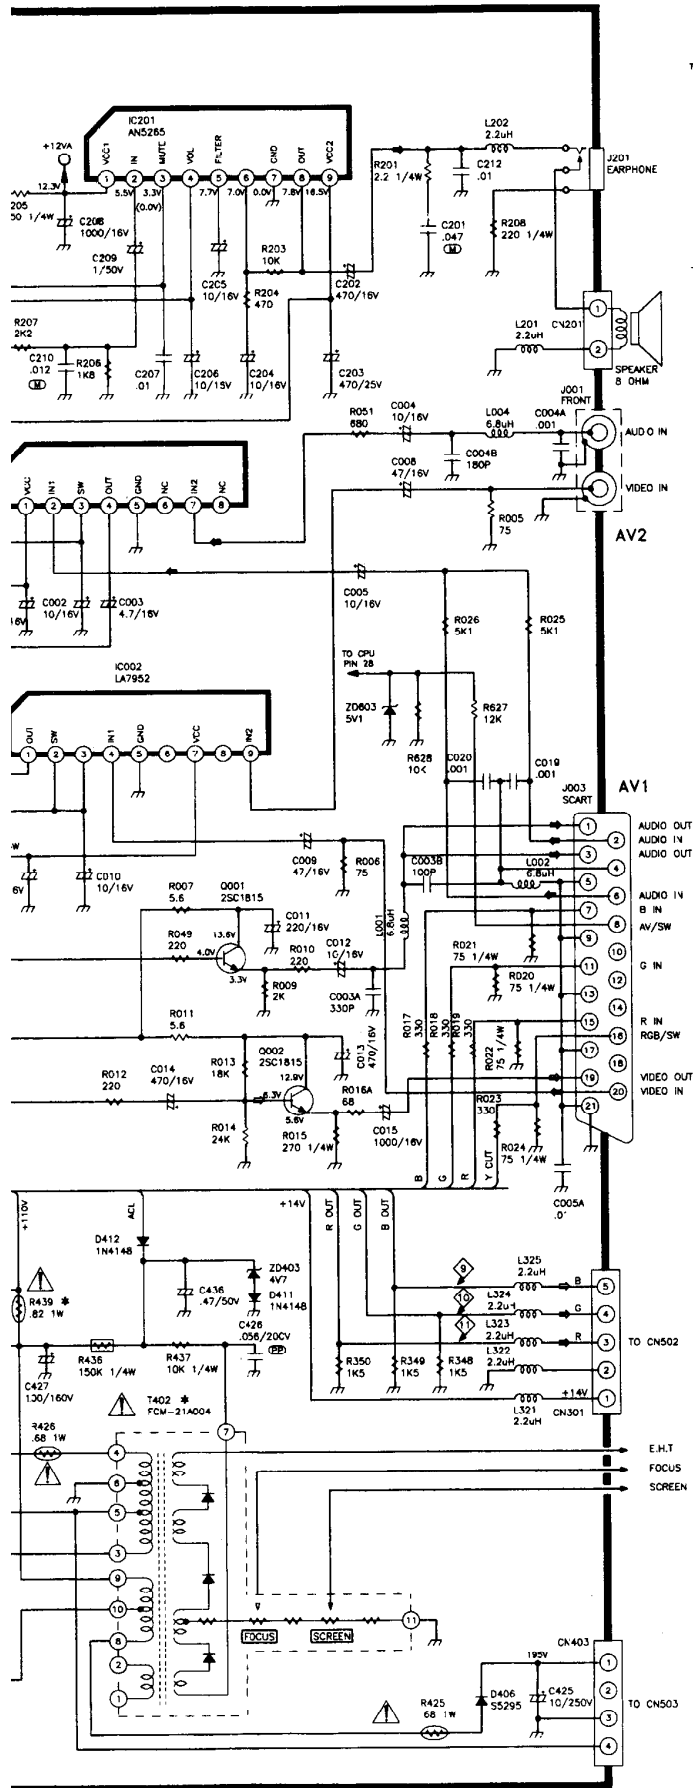

ANALOG AFT BOARD

RTV servis Horvat
 Tel: ++385-31-856-637
 Tel/fax: ++385-31-856-139
 Mob: 098-788-319
www.rtv-horvat-dj.hr